



The .zip file has following password: “refu”

You should not need a password for the inverter.

- 1) Unzip the .zip file on your laptop
- 2) Run the installation file AutoUpdate_setup_x64.exe (for 64Bit Windows)
- 3) Copy the Rfp-861P024-34-34.rfwp to the AutoUpdate installation folder
- 4) Set your local IP address to 192.168.130.1
- 5) Connect the laptop to the inverter’s Ethernet port
- 6) Run the AutoUpdate application (icon n desktop after installation)
- 7) Connect to the inverter using IP address 192.168.130.20